


## MODEL 168 up to 28.2.01

- 1 Control switch  
 2 Control module  
 A Insulating pipe

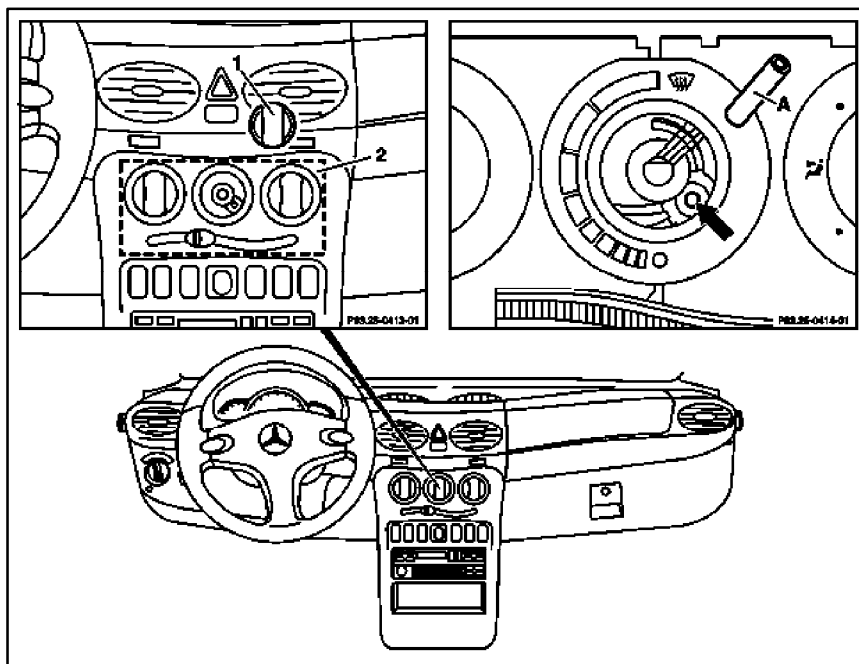

P83.25-0412-06

☒ ☒	Removing, installing		
1	Pull off control knob (1)	ⓘ Only the temperature selection control knob can be removed	
2	Replace bulb (arrow)	ⓘ In order to achieve this, push an insulating pipe (A, $\varnothing$ 5 mm) over the bulb (arrow) and pull the bulb out	
3	Install in the reverse order		