


Servicing selector mechanism


Removing and installing selector mechanism

Removing

→ Pull bellows -6- below selector mechanism off from underneath.
Slacken nut -1- securing selector fork to gear stick.
Pull bolt -7- out of selector fork.

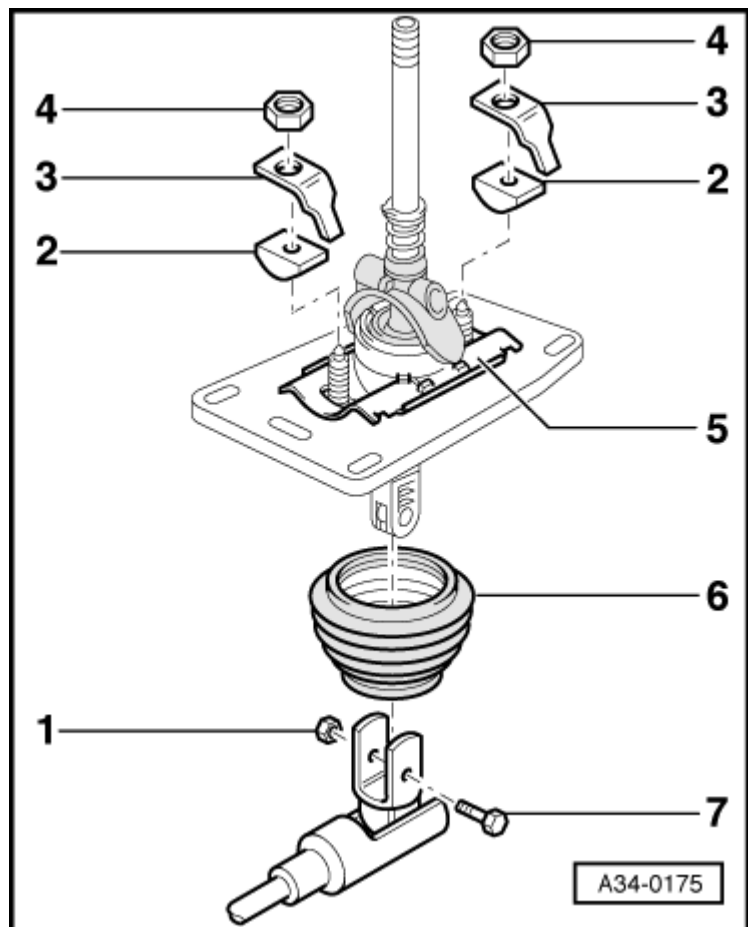

Unscrew gear stick knob.
Detach cap on centre console.
→ Unscrew bolt -arrow- for cover.
Lift off the cover.

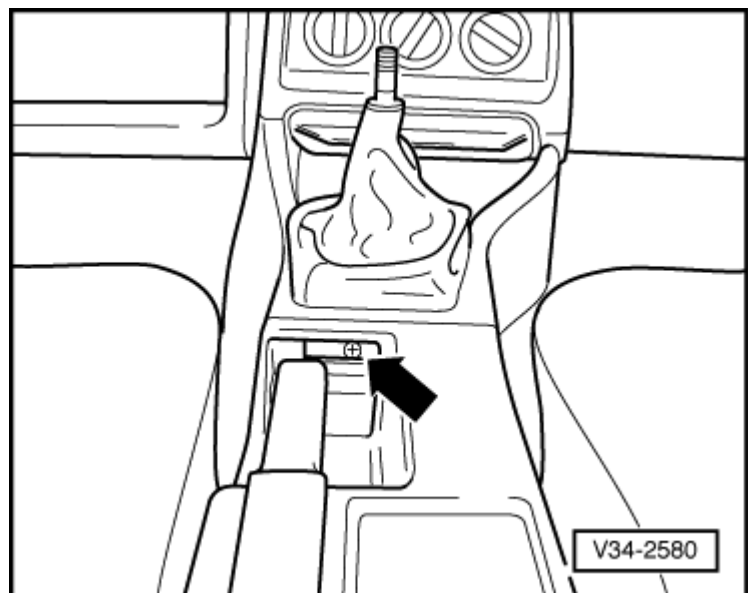

Remove noise insulation.
→ Unscrew nuts -4- securing ball housing and take off two connecting pieces -2- and leaf springs -3-.
Lift ball housing -5- out of centre console together with gear stick.

Installing

Installation is carried out in the reverse order, when doing this note the following:

Push selector rod on so that the securing bolt fits in the recess in the selector shaft.

Tightening torques

Component	Nm
Ball housing to housing for selector mechanism	25
Selector fork to gear stick	10
Selector rod to selector fork	23

