


Section: Auxiliary heating mode

Search item: []

- [-] Overview
 - [+] Body
 - [+] Engine
 - [+] Heating, ve
 - [+] Heating,
 - [+] Suppleme
 - [+] 82 Aux.
 - [+] Auxil
 - [+] Saf
 - [+] Notes
 - [+] Rules
 - [+] Repai
 - [+] Remov
 - [+] Conne
 - [+] Fuel
 - [+] Regul
 - [+] Fur
 - [+] F
 - [+] A
 - [+] S
 - [+] Air cond:
 - [+] Power tran:
 - [+] Power unit
 - [+] Running ge:
 - [+] Vehicle ele

Switching on auxiliary heating mode in vehicles with Climatic air conditioning system:

- Press immediate heating button -1-

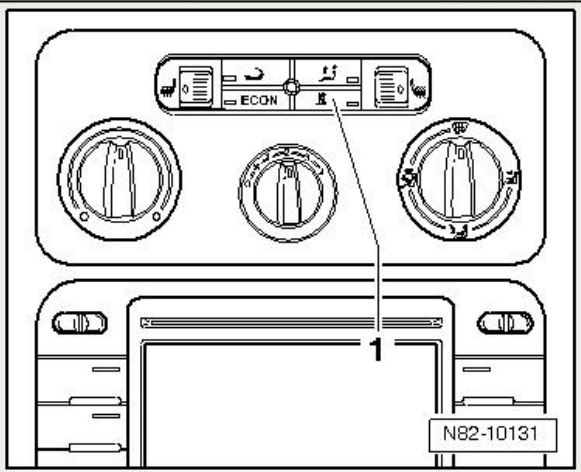

Switching on auxiliary heating mode in vehicles with Climatronic:

- Press immediate heating button -1-

Once the coolant temperature has reached 82°C, the control unit switches to the energy-saving part load mode. If the coolant temperature continues to rise above 88°C, the control unit switches to the regulated waiting period. If the coolant temperature does not drop below 70°C within 900 seconds during the controlled waiting period, the heating unit starts with the normal start procedure in full-load mode when the coolant temperature drops below 65°C.

