


## Parking aid - overview

### 1 - Parking aid senders

- ❑ In front bumper
- ❑ Only for 8-channel parking aid
- ❑ Removing and installing on vehicles up to 10.2004  
→ Chapter
- ❑ Removing and installing on vehicles from 11.2004  
→ Chapter

### 2 - Parking aid button -E266-

- ❑ Only for 8-channel parking aid
- ❑ With parking aid switch illumination - L117-
- ❑ With integrated parking aid warning lamp -K136-
- ❑ Fitting location  
→ Fig.

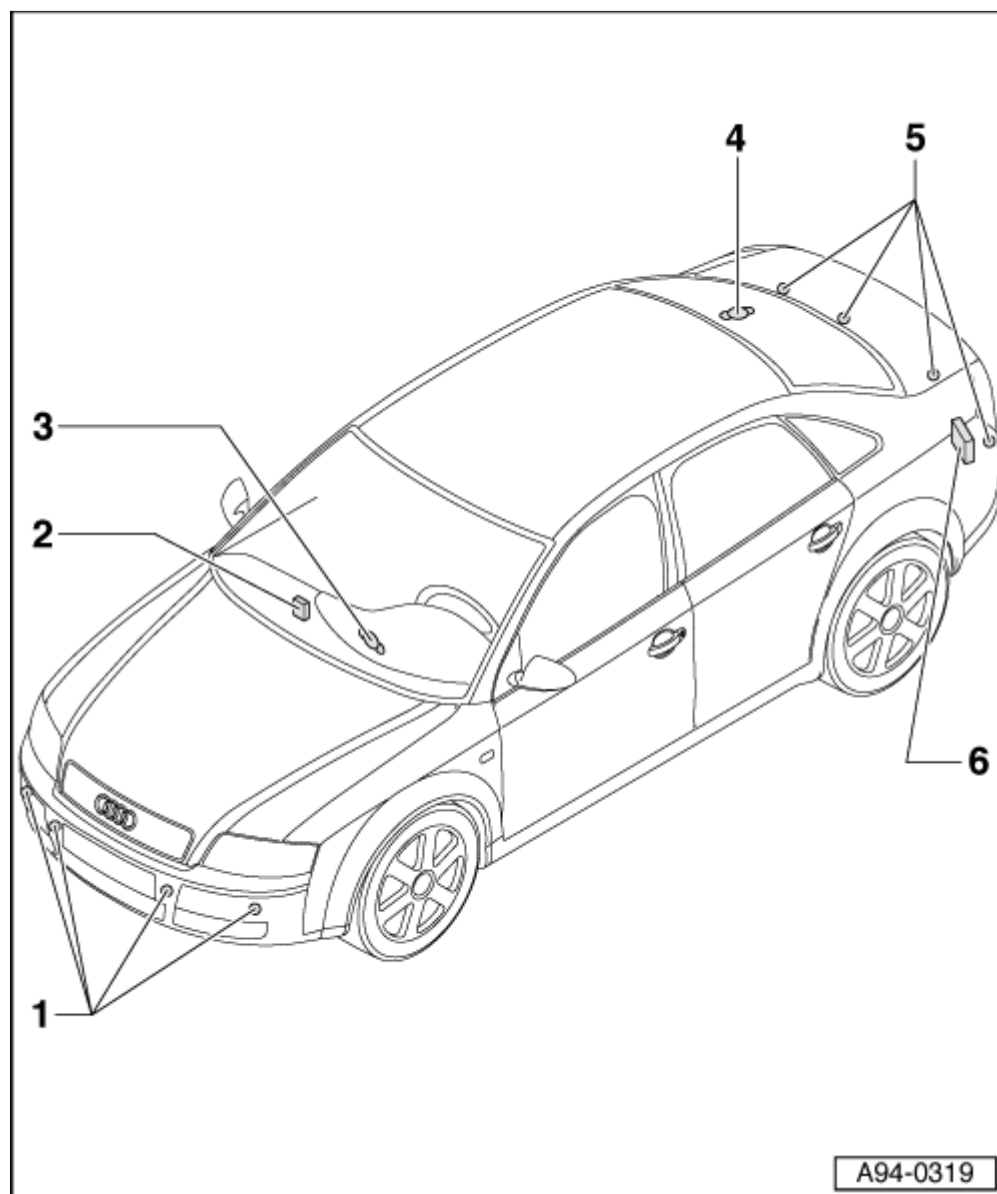

A94-0319

### 3 - Front parking aid warning buzzer -H22-

- ❑ Only for 8-channel parking aid
- ❑ Behind driver's side storage compartment
- ❑ Removing and installing → Chapter

### 4 - Rear parking aid warning buzzer -H15-

Saloon:

- ❑ Beneath rear shelf
- ❑ Removing and installing → Chapter

Avant:

- ❑ In luggage compartment (rear left) under side trim
- ❑ Removing and installing → Chapter

### 5 - Parking aid senders

- ❑ In rear bumper

- ❑ Removing and installing on vehicles up to 10.2004 → Chapter
- ❑ Removing and installing on vehicles from 11.2004 → Chapter

#### 6 - Parking aid control unit -J446-

- ❑ In luggage compartment (rear left) under side trim
- ❑ Removing and installing → Chapter

#### Fitting location for parking aid button - E266-

- ◆ On centre console switch panel -arrow-
- ◆ Removing and installing → Chapter

