


Luggage compartment side trim

Special tools and workshop equipment required


- ♦ Torque wrench -V.A.G 1783-

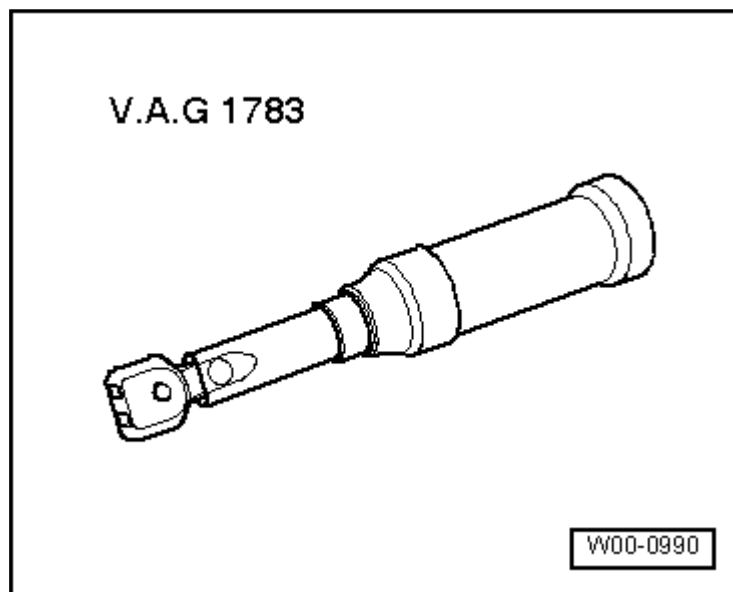

1 - Spring clip

2 - Luggage compartment trim

- ♦ Removing:
- Remove side padding (rear seat)
→ Chapter / side airbag (rear)
→ Chapter.
- Disengage luggage compartment floor from storage well liner and detach.
- Remove rear cross panel trim
→ Chapter.
- Remove bolts -4- (4x) for fastening rings -5-.
- Remove bolt -3- (1x).
- Unclip trim - spring clips - 1- (4x).
- Unplug connector for rear socket

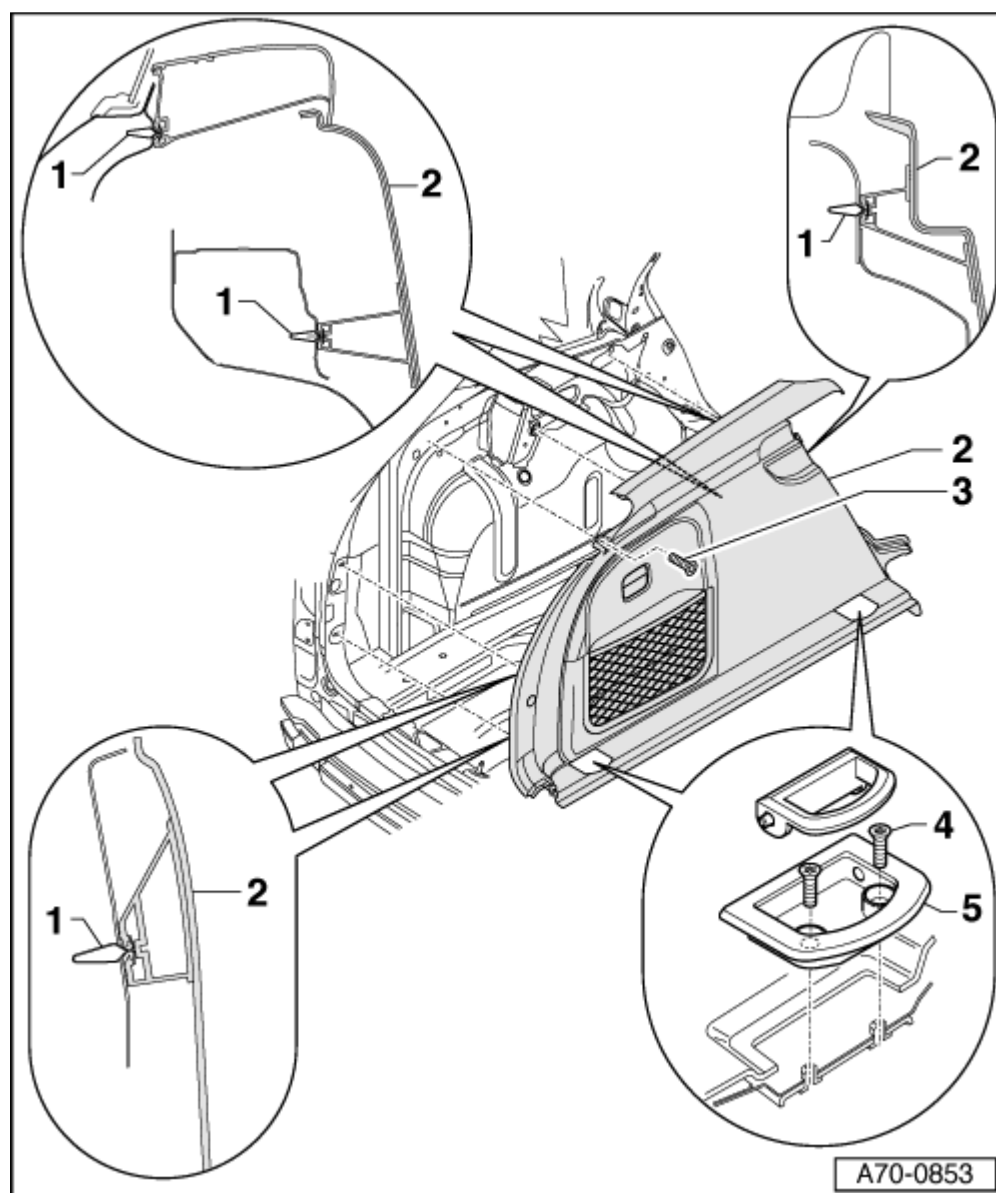

(right trim).

♦ Installing:

Install in reverse order of removal. Observe the following:

- Rubber seal for rear lid must be fitted over rear cross panel trim.



Caution

Make sure trim is properly secured.

3 - Bolt

- Tightening torque: 1.8 Nm

4 - Bolts (4x)

- Tightening torque: 4 Nm

5 - Fastening rings