

Removing and installing rear parking aid warning buzzer -H15- (Avant)

Removing

- ♦ Fitting location: in luggage compartment (rear left) under side trim.
- Remove left side trim → Rep. Gr.70.
- Unplug electrical connector.
- Unscrew threaded pin for fasteners using a TORX screwdriver.
- Lift out warning buzzer -arrow-.

Installing

Installation is carried out in the reverse order; note the following:

- Press threaded pins into fasteners.
- Install left side trim → Rep. Gr.70.

