

### Maintenance Schedule for Normal Conditions - European Model

#### 4-door Model

Follow the Normal Conditions Maintenance Schedule if the severe driving conditions specified in the Severe Conditions Maintenance Schedule do not apply.

Service at the indicated distance or time whichever comes first	km x 1,000	20	40	60	80	100	120	140	160	180	200
	miles x 1,000	12	25	37	50	62	75	87	100	112	125
	months	12	24	36	48	60	72	84	96	108	120
<a href="#">Replace engine oil</a>		•	•	•	•	•	•	•	•	•	•
<a href="#">Replace engine oil filter</a>		•	•	•	•	•	•	•	•	•	•
<a href="#">Replace air cleaner element</a>	Every 40,000 km (25,000 miles)										
<a href="#">Inspect the valve clearance</a> Check the valve clearance	Every 40,000 km (25,000 miles)										
<a href="#">Replace fuel filter</a>							•				
<a href="#">Replace spark plugs</a>	Every 40,000 km (25,000 miles)										
<a href="#">Replace timing belt</a> , and <a href="#">inspect auto-tensioner</a> , <a href="#">water pump</a> Check water pump for sings of seal leakage	Every 120,000 km (75,000 miles) or 8 years										
<a href="#">Inspect and adjust drive belts</a>  • Check for cracks and damage • Check deflection and tension			•		•		•		•		•
<a href="#">Inspect idle speed</a>							•				
Replace engine coolant <a href="#">Use genuine Honda All Season Antifreeze/Coolant Type 2</a>	At 200,000 km (120,000 miles) or 10 years, thereafter every 100,000 km (60,000 miles) or 5 years										
Replace automatic transmission fluid (ATF) <a href="#">Use genuine Honda ATF-Z1</a>	At 120,000 km (75,000 miles) or 8 years, thereafter every 80,000 km (50,000 miles) or 4 years										
Replace manual transmission fluid (MTF) <a href="#">Use genuine Honda MTF</a>	Every 120,000 km (75,000 miles) or 8 years										
<a href="#">Inspect front and rear brakes</a>  • Check the brake pad and disc thickness. Check for damage or cracks • Check the brake linings for cracking, grazing, wear, and contamination		•	•	•	•	•	•	•	•	•	•
<a href="#">Replace brake fluid</a>  • Use only DOT 3 or DOT 4 brake fluid. We recommend genuine Honda Brake Fluid • Check that brake fluid level between the upper and lower marks on the reservoir	Every 3 years										
<a href="#">Check parking brake adjustment</a> Check the parking brake operation		•	•		•		•		•		•

Service at the indicated distance or time whichever comes first	km x 1,000	20	40	60	80	100	120	140	160	180	200
	miles x 1,000	12	25	37	50	62	75	87	100	112	125
	months	12	24	36	48	60	72	84	96	108	120
<a href="#">Replace dust and pollen filter</a>	Every 30,000 km (18,000 miles) or 1 year										
<a href="#">Check lights alignment</a>		•	•	•	•	•	•	•	•	•	•
Test drive (noise, stability, dashboard operation)											
<b>Visually inspect the following items:</b>  • Check for correct installation and position, check for cracks, deterioration, rust, and leaks • Check tightness of screws, nuts, and joints. If necessary, retighten											

<p><a href="#">Tie rod ends, steering gearbox, and boots</a></p> <ul style="list-style-type: none"> <li>• Check rack grease and steering linkage</li> <li>• Check the boot for damage and leaking grease</li> </ul>	•	•	•	•	•	•	•	•	•	•
<p><a href="#">Suspension components</a></p> <ul style="list-style-type: none"> <li>• Check the bolts for tightness</li> <li>• Check all dust cover for deterioration and damage</li> </ul>										
<p><a href="#">Driveshaft boots</a></p> <ul style="list-style-type: none"> <li>• Check the boot and boot band for cracks</li> <li>• Check rack grease</li> </ul>										
<p><a href="#">Brake hoses and lines (including ABS)</a> Check the master cylinder, proportioning control valve, and ABS modulator for leakage</p>										
<p>All fluid levels and condition of fluid Check for leaks</p>										
<p><a href="#">Exhaust system</a> Check the catalytic converter heat shield, exhaust pipe, and muffler for damage, leaks, and tightness</p>										
<p><a href="#">Fuel lines and connections</a></p> <ul style="list-style-type: none"> <li>• Check fuel lines for loose connections, cracks, and deterioration</li> <li>• Retighten loose connections and replace any damaged parts</li> </ul>										