


Central locking system (m.y. 1996) (Golf III/Jetta III only)

Relay locations

Position of relays and multi-pin connector wiring, see also "Component Locations" section.

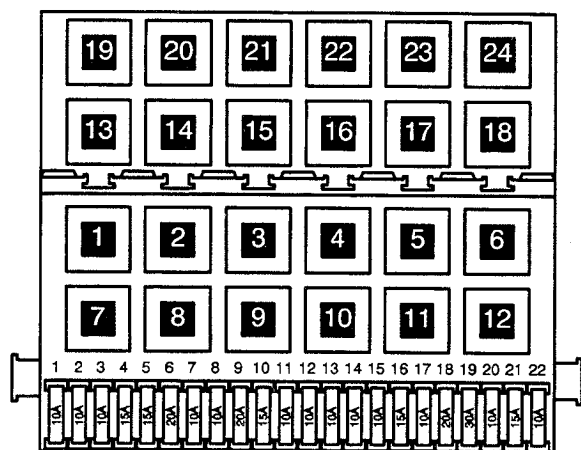

12 — Fuel Pump Relay (67, 80, 167)


Note:

Number in parentheses indicates production control number stamped on relay housing.

97-2932

Fuse colors

30A — green
 25A — white
 20A — yellow
 15A — blue
 10A — red

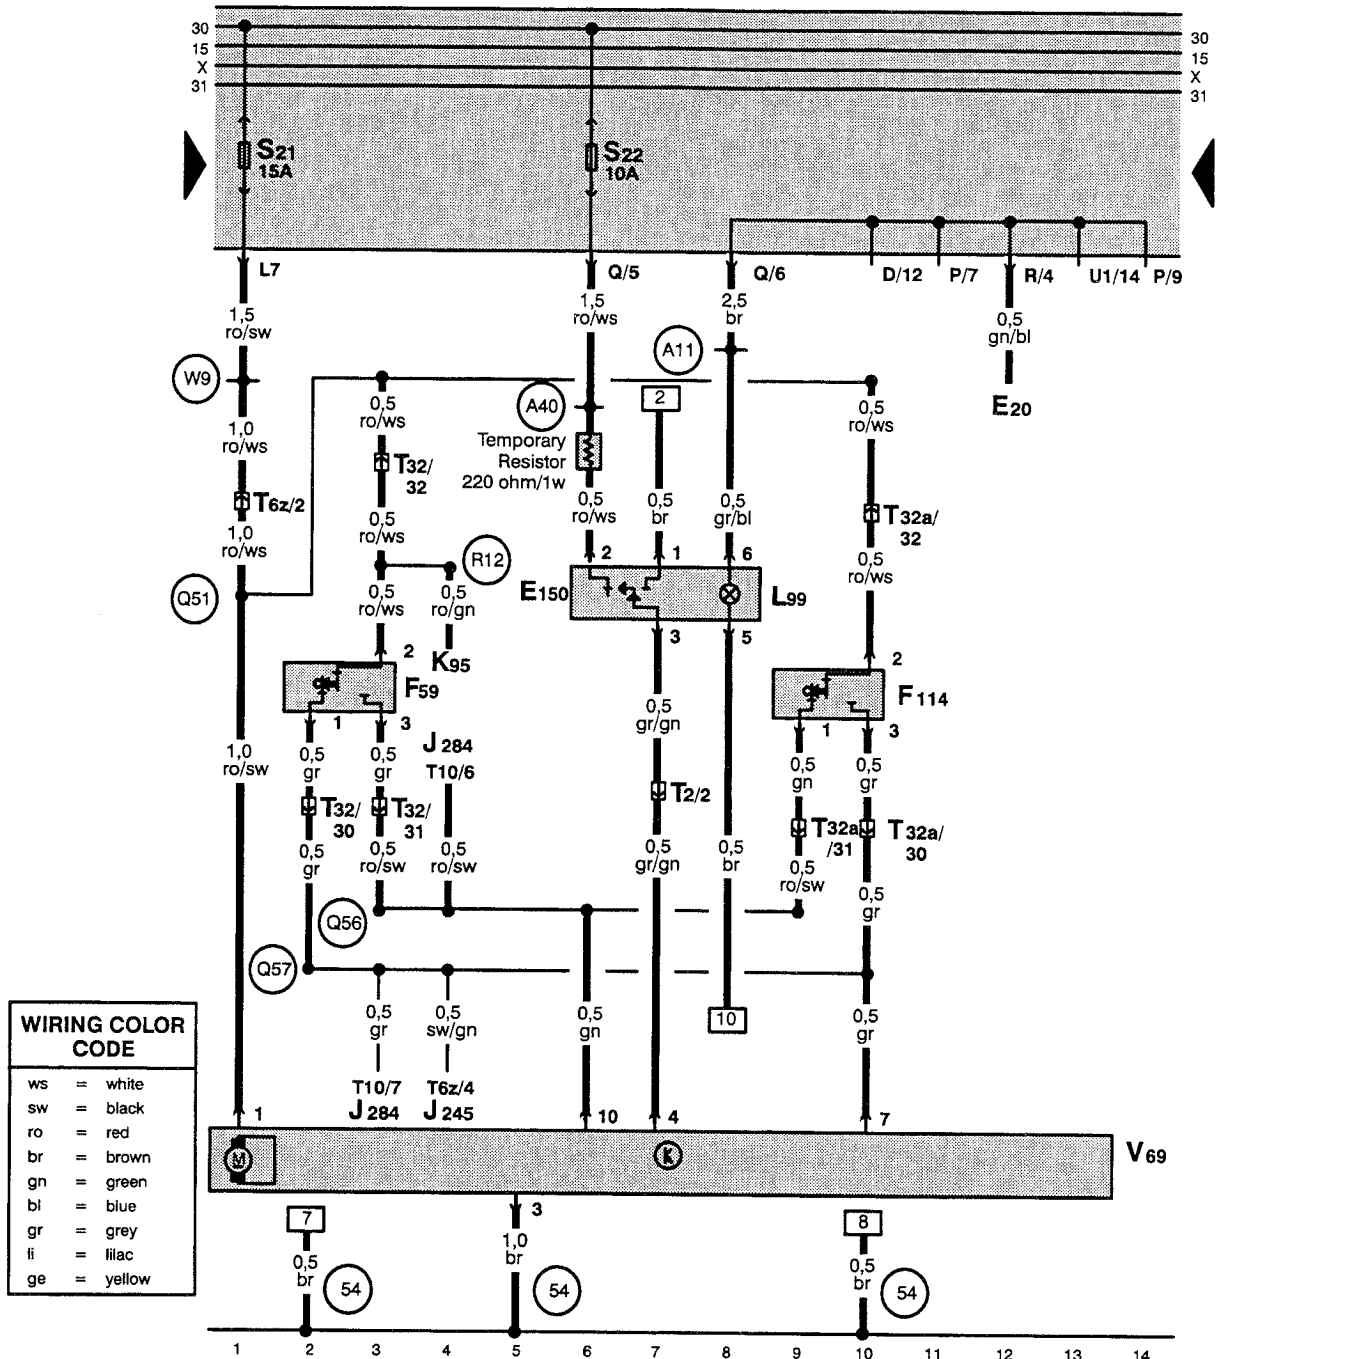

- E20 – Instrument Panel Light Dimmer Switch
 E150 – Door Lock - Unlock Switch
 F59 – Driver's Door Central Locking System Door Switch
 F114 – Passenger's Door Central Locking System Door Switch
 J245 – Power Sunroof Control Module
 J284 – Alarm System Control Module
 K95 – Alarm System Indicator Light
 L99 – Lighting Switch for Interior Lock
 T2 – Double Connector, near Door Lock - Unlock Switch
 T6z – 6-Pin Connector, behind dash panel
 T10 – 10-Pin Connector, behind dash panel, left, on Alarm System Control Module
 T32 – 32-Pin Connector, on A-pillar, lower left
 T32a – 32-Pin Connector, on A-pillar, lower right
 V69 – Central Locking System Pump and Control Module

- (54) – Ground connection, on rear apron
 (A11) – Plus connection (58b), in instrument panel wiring harness
 (A40) – Plus connection (30), in instrument panel wiring harness
 (Q51) – Plus connection (30), in alarm system wiring harness
 (Q56) – Wire connection (open), in alarm system wiring harness
 (Q57) – Wire connection (closed), in alarm system wiring harness
 (R12) – Plus connection -3- (30), in driver's door wiring harness
 (W9) – Plus connection (30), in rear wiring harness