


START/COLD START
 (For Component Locations See Page 214)

WIRING DIAGRAM

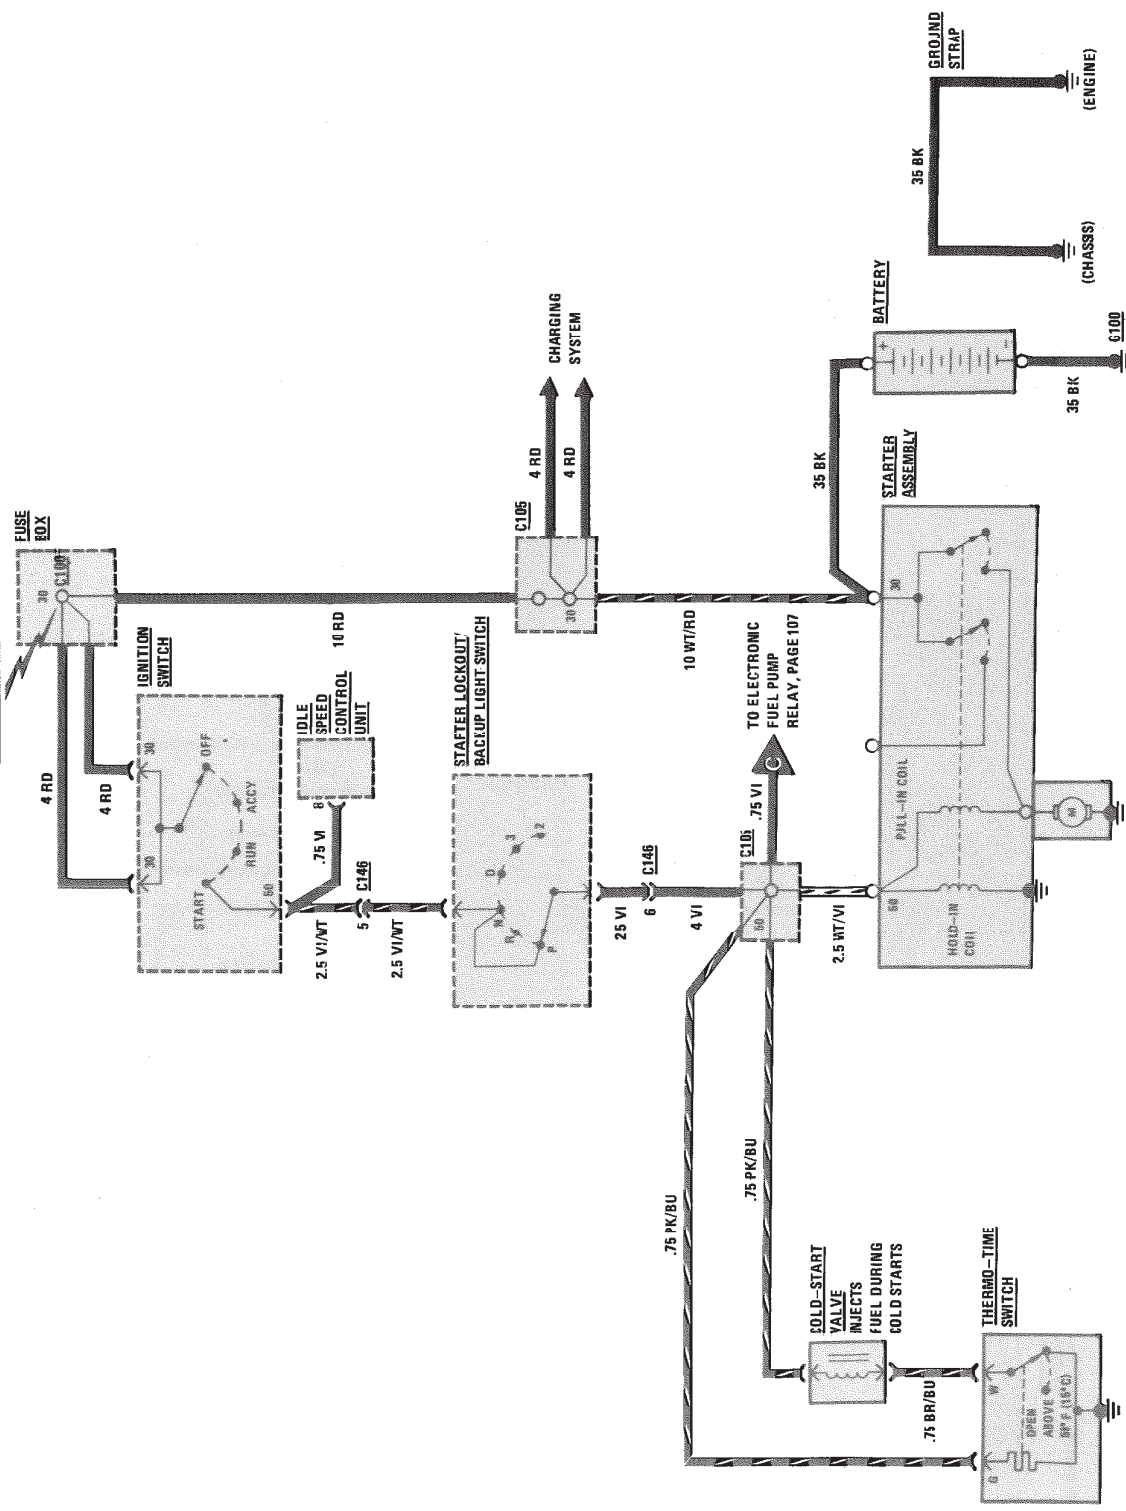

REVISIONS:
