

Telephone:

Fax:

NOTE: If the service interval indicator flashes it may be caused by one of the service interval indicator parameters not being programmed. This can only be done with suitable diagnostic equipment. Always check for any stored trouble codes as this may affect the resetting of the service interval indicator.

Ensure all doors are closed.

Turn ignition key to position I.

Press and hold reset button [A] **20573**.

Immediately turn ignition key to position II.

Keep reset button [A] depressed until trip meter is reset to 0.

NOTE: If trip meter has already been reset:

- Hold reset button [A] for 10-14 seconds until previous trip meter reading is shown.
- Press and hold reset button [A] until trip meter is reset to 0.

MY 2003 ➡ : A yellow warning light will illuminate when it is time to release button [A].

Release reset button [A] within 4 seconds. There will be an audible signal when reset complete.

If reset button is not released within 4 seconds, the service interval indicator will not be reset.

