


## Resetting the Power Window Control Unit

Resetting the driver's power window is required when any of the following have occurred:

- Power window regulator replacement or repair
- Power window motor replacement or repair
- Window run channel replacement or repair
- Driver's door glass replacement or repair
- Power is removed from the power window control unit while the power window timer is ON.
- Power window master switch replacement

1. Turn the ignition switch ON (II).
2. Move the driver's window all the way down by using the driver's window DOWN switch.
3. Open the driver's door.

NOTE: Steps 4—7 must be done within 5 seconds of each other.

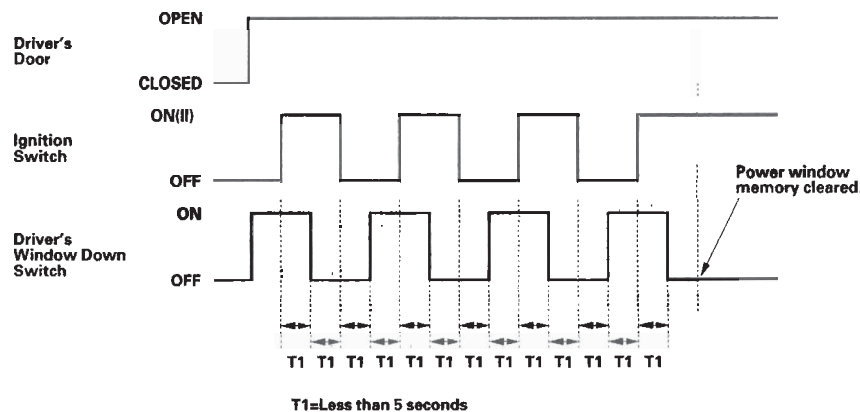

4. Turn the ignition switch OFF.
5. Push and hold the driver's window DOWN switch.
6. Turn the ignition switch ON (II).
7. Release the driver's window DOWN switch.
8. Repeat step 4—7 three more times.
9. Wait for at least 1 second.
10. Check if the AUTO UP and AUTO DOWN functions still work. If they do, go back to step 1 (the AUTO function has not been cleared; repeat the clear procedure again). If they do not, go to step 11.
11. Move the driver's window all the way down by using the driver's window DOWN switch.
12. Pull up and hold the driver's window UP switch until the window reaches the fully closed position, then continue to hold the switch for 1 second.
13. Confirm that the power window control unit is reset by using the driver's window AUTO UP and AUTO DOWN functions.

If the window still does not work in AUTO, repeat the procedure several times, paying close attention to the 5 second time limit between steps. If it still does not work, refer to the master switch input test (see page 22-192).