

17: Maintenance service, D5244T4

V70 (00-08), 2006, D5244T4

1/9/2012



PRINT

## 17: Maintenance service, D5244T4

## Service program

Program point: V70 D5244T4, T5, T6, T7	year: km x 1000: miles x 1000:	1	2	3	4	5	6	7	8	9	10	11	12	13
		30	60	90	120	150	180	210	240	270	300	330	360	390
		18	36	54	72	90	108	126	144	162	180	198	216	234
<b>Automatic transmission control</b> -check the park / neutral position (PNP) switch		x	x	x	x	x	x	x	x	x	x	x	x	x
<b>Parking brake</b> -check and adjust		x	x	x	x	x	x	x	x	x	x	x	x	x
<b>External lighting</b> -check the function		x	x	x	x	x	x	x	x	x	x	x	x	x
<b>Washers and wipers for windshields and headlamps</b> -check the function and for signs of wear		x	x	x	x	x	x	x	x	x	x	x	x	x
<b>Engine</b> -check for leaks		x	x	x	x	x	x	x	x	x	x	x	x	x
Program point: V70 D5244T4, T5, T6, T7	year: km x 1000: miles x 1000:	1	2	3	4	5	6	7	8	9	10	11	12	13
		30	60	90	120	150	180	210	240	270	300	330	360	390
		18	36	54	72	90	108	126	144	162	180	198	216	234
<b>Raise the vehicle</b>														
<b>Engine, transmission, transmission</b> -check for leaks	In event of leakage from the transmission, check the oil level.	x	x	x	x	x	x	x	x	x	x	x	x	x
<b>Engine oil, oil filter</b> -drain the oil. Replace the oil filter.	See Oil/oil filter, replacing .	x	x	x	x	x	x	x	x	x	x	x	x	x
<b>Automatic transmission</b> The oil does not normally need changing. The oil must be changed if instructed in	<b>For vehicles used as taxis or primarily used for towing, change oil according to the service program. TF-80SC, see</b>		x		x		x		x		x		x	

the text information display.	<b>Transmission fluid, changing .</b>													
<b>Fuel filter</b> -drain off the condensation -replace	See Fuel filter, draining .	x		x		x		x		x		x		x
	See Fuel filter, replacing .  <b>For markets with contaminated diesel - replace at an interval of 10 000 to 20 000 km</b>		x		x		x		x		x		x	
<b>Wheels and tires</b> -check	Check for damage and signs of wear.	x	x	x	x	x	x	x	x	x	x	x	x	x
<b>Program point: V70 D5244T4, T5, T6, T7</b>	<b>year:</b>	<b>1</b>	<b>2</b>	<b>3</b>	<b>4</b>	<b>5</b>	<b>6</b>	<b>7</b>	<b>8</b>	<b>9</b>	<b>10</b>	<b>11</b>	<b>12</b>	<b>13</b>
	<b>km x 1000:</b>	<b>30</b>	<b>60</b>	<b>90</b>	<b>120</b>	<b>150</b>	<b>180</b>	<b>210</b>	<b>240</b>	<b>270</b>	<b>300</b>	<b>330</b>	<b>360</b>	<b>390</b>
	<b>miles x 1000:</b>	<b>18</b>	<b>36</b>	<b>54</b>	<b>72</b>	<b>90</b>	<b>108</b>	<b>126</b>	<b>144</b>	<b>162</b>	<b>180</b>	<b>198</b>	<b>216</b>	<b>234</b>
<b>Drive shafts</b> -check the play -check rubber bellows		x	x	x	x	x	x	x	x	x	x	x	x	x
		x	x	x	x	x	x	x	x	x	x	x	x	x
<b>Brake pads, brake discs</b> -check	Brake pads, front, check Brake pads, rear, check	x	x	x	x	x	x	x	x	x	x	x	x	x
<b>Brake lines, fuel lines, fuel filter</b> -check for leakage and damage		x	x	x	x	x	x	x	x	x	x	x	x	x
<b>Exhaust system</b> -check	Check: condition, leakage, mounting.	x	x	x	x	x	x	x	x	x	x	x	x	x
<b>Program point: V70 D5244T4, T5, T6, T7</b>	<b>year:</b>	<b>1</b>	<b>2</b>	<b>3</b>	<b>4</b>	<b>5</b>	<b>6</b>	<b>7</b>	<b>8</b>	<b>9</b>	<b>10</b>	<b>11</b>	<b>12</b>	<b>13</b>
	<b>km x 1000:</b>	<b>30</b>	<b>60</b>	<b>90</b>	<b>120</b>	<b>150</b>	<b>180</b>	<b>210</b>	<b>240</b>	<b>270</b>	<b>300</b>	<b>330</b>	<b>360</b>	<b>390</b>
	<b>miles x 1000:</b>	<b>18</b>	<b>36</b>	<b>54</b>	<b>72</b>	<b>90</b>	<b>108</b>	<b>126</b>	<b>144</b>	<b>162</b>	<b>180</b>	<b>198</b>	<b>216</b>	<b>234</b>
<b>Front suspension, steering system</b> -check for signs of wear		x	x	x	x	x	x	x	x	x	x	x	x	x
<b>Rear wheel suspension</b> -check for signs of wear		x	x	x	x	x	x	x	x	x	x	x	x	x
<b>AWD: Final drive, bevel gear</b> -check for leaks	Only check the oil level if there is leakage.	x	x	x	x	x	x	x	x	x	x	x	x	x
<b>AWD: Propeller shaft, pilot bearing,</b>														

<b>universal joint</b> -check for signs of wear		x	x	x	x	x	x	x	x	x	x	x	x	x
<b>Lower the vehicle</b>														
<b>Air cleaner (ACL), engine</b> -replace	Clean the air cleaner (ACL) housing.		x		x		x		x		x		x	
<b>Top up the engine oil</b>		x	x	x	x	x	x	x	x	x	x	x	x	x
<b>Program point: V70 D5244T4, T5, T6, T7</b>	<b>year:</b>	<b>1</b>	<b>2</b>	<b>3</b>	<b>4</b>	<b>5</b>	<b>6</b>	<b>7</b>	<b>8</b>	<b>9</b>	<b>10</b>	<b>11</b>	<b>12</b>	<b>13</b>
	<b>km x 1000:</b>	<b>30</b>	<b>60</b>	<b>90</b>	<b>120</b>	<b>150</b>	<b>180</b>	<b>210</b>	<b>240</b>	<b>270</b>	<b>300</b>	<b>330</b>	<b>360</b>	<b>390</b>
	<b>miles x 1000:</b>	<b>18</b>	<b>36</b>	<b>54</b>	<b>72</b>	<b>90</b>	<b>108</b>	<b>126</b>	<b>144</b>	<b>162</b>	<b>180</b>	<b>198</b>	<b>216</b>	<b>234</b>
<b>Fluid levels - engine compartment</b> -check and adjust the brake fluid, clutch fluid, power steering fluid, coolant, washer fluid.		x	x	x	x	x	x	x	x	x	x	x	x	x
<b>Engine coolant</b> -check and adjust the anti-freeze rating and anti-corrosion agent.		x	x	x	x	x	x	x	x	x	x	x	x	x
<b>Battery</b> -check the pole pieces, electrolyte level, mounting		x	x	x	x	x	x	x	x	x	x	x	x	x
<b>Vehicles with temporary tire sealing kit</b> -check the container with sealing fluid, replace every fourth year, see decal														
<b>Auxiliary unit belt, belt tensioner, idler pulley</b> -replace according to the service program, or: -replace at max. 10 year intervals	See Auxiliaries belt / belt tensioner, replacing .					x					x			
<b>Timing belt, belt tensioner, idler pulley</b>	See Replacing the timing belt .													

-replace according to the service program, or: -replace at max. 10 year intervals						x					x			
<b>Program point:</b> <b>V70</b> <b>D5244T4, T5,</b> <b>T6, T7</b>	<b>year:</b>	<b>1</b>	<b>2</b>	<b>3</b>	<b>4</b>	<b>5</b>	<b>6</b>	<b>7</b>	<b>8</b>	<b>9</b>	<b>10</b>	<b>11</b>	<b>12</b>	<b>13</b>
	<b>km x 1000:</b>	<b>30</b>	<b>60</b>	<b>90</b>	<b>120</b>	<b>150</b>	<b>180</b>	<b>210</b>	<b>240</b>	<b>270</b>	<b>300</b>	<b>330</b>	<b>360</b>	<b>390</b>
	<b>miles x 1000:</b>	<b>18</b>	<b>36</b>	<b>54</b>	<b>72</b>	<b>90</b>	<b>108</b>	<b>126</b>	<b>144</b>	<b>162</b>	<b>180</b>	<b>198</b>	<b>216</b>	<b>234</b>
<b>Air cleaner (ACL) passenger compartment</b> -replace		x	x	x	x	x	x	x	x	x	x	x	x	x
<b>Brake fluid</b> -replace	Recommend that a customer with normal mileage has the fluid replaced every other year.		x		x		x		x		x		x	
	<b>The oil must be replaced every year if the car is used for mountain driving or is mainly used in humid climates.</b>	x	x	x	x	x	x	x	x	x	x	x	x	x
<b>SRI</b> - set the service reminder indicator (SRI) to zero	See Resetting the service reminder indicator (SRI)	x	x	x	x	x	x	x	x	x	x	x	x	x

1/9/2012

PRINT