

17: Maintenance service, D4204T

V50, 2007, D4204T

5/9/2012



PRINT

17: Maintenance service, D4204T

Service Program A

Program point:	year:	1	2	3	4	5	6	7	8	9	10
	km x 1000:	20	40	60	80	100	120	140	160	180	200
	miles x 1000:	12.5	25	37.5	50	62.5	75	87.5	100	112.5	125
Parking brake -check and adjust		x	x	x	x	x	x	x	x	x	x
External lighting -check the function		x	x	x	x	x	x	x	x	x	x
Horn - check the signal		x	x	x	x	x	x	x	x	x	x
Headlamp/fog lamp -check and align headlamps		x	x	x	x	x	x	x	x	x	x
Washer / wipers for windshields and headlamps -check the function and for signs of wear		x	x	x	x	x	x	x	x	x	x
Seat belts -check the function and for signs of wear		x	x	x	x	x	x	x	x	x	x
Program point:	year:	1	2	3	4	5	6	7	8	9	10
	km x 1000:	20	40	60	80	100	120	140	160	180	200
	miles x 1000:	12.5	25	37.5	50	62.5	75	87.5	100	112.5	125
Raise the vehicle											
Engine, transmission, transmission -check for leaks	In event of leakage from the transmission, check the oil level.	x	x	x	x	x	x	x	x	x	x
Engine oil, oil filter - drain the oil. Replace the oil filter		x	x	x	x	x	x	x	x	x	x
Wheels and tires											

(excluding spare wheel) - check for damage, wear, tire pressure		x	x	x	x	x	x	x	x	x	x
Program point:	year:	1	2	3	4	5	6	7	8	9	10
	km x 1000:	20	40	60	80	100	120	140	160	180	200
	miles x 1000:	12.5	25	37.5	50	62.5	75	87.5	100	112.5	125
Drive shafts -check the play -check rubber bellows				x			x			x	
Brake pads, brake discs -check	Brake pads, front, check Brake pads, rear, check	x	x	x	x	x	x	x	x	x	x
Brake lines, fuel lines -check for leakage and damage				x			x			x	
Program point:	year:	1	2	3	4	5	6	7	8	9	10
	km x 1000:	20	40	60	80	100	120	140	160	180	200
	miles x 1000:	12.5	25	37.5	50	62.5	75	87.5	100	112.5	125
Front suspension, steering system -check for signs of wear				x			x			x	
Rear wheel suspension -check for signs of wear				x			x			x	
Diesel particle filter -replace - resetting the kilometre counter particle filter (ECM)	Change only according to km/miles interval Particle filter diesel						x				
Topping up the additive engines with diesel particle filter - top up the additive - resetting the tank level counter (ADM)	Perform only according to km/miles interval Tank additive, filling				x		x			x	
Lower the vehicle											
	Change										

Air cleaner (ACL), engine -replace	only according to km/miles interval Clean the air cleaner (ACL) housing.			x				x			x
Fuel filter -replace -drain off the condensation	Change only according to km/miles interval			x				x			x
Fuel filter In markets with contaminated fuel: -replace	10 000 - 20 000 km interval										
Program point:	year: km x 1000: miles x 1000:	1	2	3	4	5	6	7	8	9	10
		20	40	60	80	100	120	140	160	180	200
		12.5	25	37.5	50	62.5	75	87.5	100	112.5	125
Fluid levels - engine compartment -check and adjust brake fluid, clutch fluid, washer fluid, coolant		x	x	x	x	x	x	x	x	x	x
Engine coolant -check and adjust the anti-freeze rating and anti-corrosion agent		x	x	x	x	x	x	x	x	x	x
Battery -check terminal shoes, electrolyte level, mounting				x				x			x
Vehicles with temporary tire sealing kit -check the container with sealer fluid, replace every fourth year, see decal.											
Accessory Drive Belt											

-replace the belt according to the service program or: - replace the belt at a maximum 10 year interval											
Program point:	year:	1	2	3	4	5	6	7	8	9	10
	km x 1000:	20	40	60	80	100	120	140	160	180	200
	miles x 1000:	12.5	25	37.5	50	62.5	75	87.5	100	112.5	125
Timing belt / belt tensioner/ idler pulley -replace according to the service program or: - replace at a maximum 10 year interval											
Air cleaner (ACL) passenger compartment -replace		x	x	x	x	x	x	x	x	x	x
Roof system C70 - check - lubrication	See: Service program/838 Convertible roof/Service roof system	x	x	x	x	x	x	x	x	x	x
Brake fluid -replace	Recommend that a customer with normal mileage has the fluid replaced every other year.		x		x		x		x		x
	The fluid must be replaced every year if the car is used for mountain driving or is mainly used in humid climates.	x	x	x	x	x	x	x	x	x	x
SRI - set the	Resetting the service										

service reminder indicator (SRI) to zero	reminder indicator (SRI)	x	x	x	x	x	x	x	x	x	x	x
---	--------------------------------	---	---	---	---	---	---	---	---	---	---	---

5/9/2012

PRINT