

17: Maintenance service, D4204T

V50, 2007, D4204T

5/9/2012



PRINT

17: Maintenance service, D4204T

Service Program B

Program point:	year:	11	12	13	14	15	16	17	18	19	20
	km x 1000:	220	240	260	280	300	320	340	360	380	400
	miles x 1000:	137.5	150	162.5	175	187.5	200	212.5	225	237.5	250
Parking brake -check and adjust		x	x	x	x	x	x	x	x	x	x
External lighting -check the function		x	x	x	x	x	x	x	x	x	x
Horn - check the signal		x	x	x	x	x	x	x	x	x	x
Headlamp/fog lamp -check and align headlamps		x	x	x	x	x	x	x	x	x	x
Washer / wipers for windshields and headlamps -check the function and for signs of wear		x	x	x	x	x	x	x	x	x	x
Seat belts -check the function and for signs of wear		x	x	x	x	x	x	x	x	x	x
Program point:	year:	11	12	13	14	15	16	17	18	19	20
	km x 1000:	220	240	260	280	300	320	340	360	380	400
	miles x 1000:	137.5	150	162.5	175	187.5	200	212.5	225	237.5	250
Raise the vehicle											
Engine, transmission, transmission -check for leaks	In event of leakage from the transmission, check the oil level.	x	x	x	x	x	x	x	x	x	x
Engine oil, oil filter -drain the oil and replace the oil filter		x	x	x	x	x	x	x	x	x	x
Wheels and tires (excluding spare wheel) - check for damage, wear, tire pressure		x	x	x	x	x	x	x	x	x	x

Program point:	year: km x 1000: miles x 1000:	11	12	13	14	15	16	17	18	19	20
		220	240	260	280	300	320	340	360	380	400
		137.5	150	162.5	175	187.5	200	212.5	225	237.5	250
Drive shafts -check the play -check rubber bellows			x			x			x		
Brake pads, brake discs - check	Brake pads, front, check Brake pads, rear, check	x	x	x	x	x	x	x	x	x	x
Brake lines, fuel lines -check for leakage and damage			x			x			x		
Program point:	year: km x 1000: miles x 1000:	11	12	13	14	15	16	17	18	19	20
		220	240	260	280	300	320	340	360	380	400
		137.5	150	162.5	175	187.5	200	212.5	225	237.5	250
Front suspension, control system -check for signs of wear			x			x			x		
Rear wheel suspension -check for signs of wear			x			x			x		
Diesel particle filter -replace - resetting the kilometre counter particle filter (ECM)	Change only according to km/miles interval Particle filter diesel		x						x		
Topping up the additive engines with diesel particle filter - top up the additive - resetting the tank level gauge (ADM)	Perform only according to km/miles interval Tank additive, filling		x			x			x		
Lower the vehicle											
Air cleaner (ACL), engine -replace	Change only according to km/miles interval Clean the air cleaner (ACL) housing.		x			x			x		
	Change only										

Fuel filter -replace -drain off the condensation	according to km/miles interval		x			x			x		
		x		x	x		x	x		x	x
Fuel filter In markets with contaminated fuel: -replace	10 000 - 20 000 km interval										
Program point:	year:	11	12	13	14	15	16	17	18	19	20
	km x 1000:	220	240	260	280	300	320	340	360	380	400
	miles x 1000:	137.5	150	162.5	175	187.5	200	212.5	225	237.5	250
Fluid levels - engine compartment -check and adjust brake fluid, clutch fluid, washer fluid, coolant		x	x	x	x	x	x	x	x	x	x
Engine coolant - check /adjust the anti-freeze/corrosion protection rating		x	x	x	x	x	x	x	x	x	x
Battery - check terminal shoes, electrolyte level, mounting			x			x			x		
Vehicles with temporary tire sealing kit - check the container with sealer fluid, replace every fourth year, see decal.											
Accessory Drive Belt -replace the belt according to the service program or: - replace the belt at a maximum 10 year interval			x								
Program point:	year:	11	12	13	14	15	16	17	18	19	20
	km x 1000:	220	240	260	280	300	320	340	360	380	400
	miles x 1000:	137.5	150	162.5	175	187.5	200	212.5	225	237.5	250
Timing belt / belt											

<p>tensioner/ idler pulley -replace according to the service program or: - replace at a maximum 10 year interval</p>			x								
<p>Air cleaner (ACL) passenger compartment -replace</p>		x	x	x	x	x	x	x	x	x	x
<p>Roof system C70 - check - lubrication</p>	See: Service program/838 Convertible roof/Service roof system	x	x	x	x	x	x	x	x	x	x
<p>Brake fluid -replace</p>	Recommend that a customer with normal mileage has the fluid replaced every other year.		x		x		x		x		x
	The fluid must be replaced every year if the car is used for mountain driving or is mainly used in humid climates.	x	x	x	x	x	x	x	x	x	x
<p>SRI - set the service reminder indicator (SRI) to zero</p>	Resetting the service reminder indicator (SRI)	x	x	x	x	x	x	x	x	x	x

5/9/2012

PRINT