

17: Maintenance service, D5244T4

V70 (08-), 2008, D5244T4, M66, YV1BW714181031922, 031922

7/9/2012



PRINT

17: Maintenance service, D5244T4

Service program

Program point:	year: km x 1000: miles x 1000:	1	2	3	4	5	6	7	8	9	10	11	12	13
		30	60	90	120	150	180	210	240	270	300	330	360	390
		18	36	54	72	90	108	126	144	162	180	198	216	234
Automatic transmission control -check the park / neutral position (PNP) switch		x	x	x	x	x	x	x	x	x	x	x	x	x
Parking brake -check and adjust		x	x	x	x	x	x	x	x	x	x	x	x	x
External lighting -check the function		x	x	x	x	x	x	x	x	x	x	x	x	x
Horn - check the signal		x	x	x	x	x	x	x	x	x	x	x	x	x
Headlamp/fog lamp -check and align headlamps		x	x	x	x	x	x	x	x	x	x	x	x	x
Washers and wipers for windshields and headlamps -check the function and for signs of wear		x	x	x	x	x	x	x	x	x	x	x	x	x
Seat belts -check the function and for signs of wear		x	x	x	x	x	x	x	x	x	x	x	x	x
Program point:	year: km x 1000: miles x 1000:	1	2	3	4	5	6	7	8	9	10	11	12	13
		30	60	90	120	150	180	210	240	270	300	330	360	390
		18	36	54	72	90	108	126	144	162	180	198	216	234
Raise the vehicle														
Engine, transmission, transmission -check for leaks	In event of leakage from the transmission, check the oil level.	x	x	x	x	x	x	x	x	x	x	x	x	x
Engine oil, oil filter - change oil and oil filter		x	x	x	x	x	x	x	x	x	x	x	x	x
Automatic transmission The oil does not normally need changing. The oil must be changed if instructed to do so in the display.	For vehicles used as taxis or that mainly are driven with trailer, change oil according to the service program.		x		x		x		x		x		x	
Wheels and tires - check for damage and signs of wear		x	x	x	x	x	x	x	x	x	x	x	x	x
Tires excl. spare														

wheel -check and adjust the air pressure		x	x	x	x	x	x	x	x	x	x	x	x	x
Program point:	year:	1	2	3	4	5	6	7	8	9	10	11	12	13
	km x 1000:	30	60	90	120	150	180	210	240	270	300	330	360	390
	miles x 1000:	18	36	54	72	90	108	126	144	162	180	198	216	234
Drive shafts -check the play -check rubber bellows			x		x		x		x		x		x	
Brake pads, brake discs -check	Brake pads, front, check Brake pads, rear, check	x	x	x	x	x	x	x	x	x	x	x	x	x
Brake lines, fuel lines, fuel filter -check for leakage and damage			x		x		x		x		x		x	
Fuel filter -replace	In markets with contaminated fuel: - replace at 10,000 - 20,000 km intervals Change only according to km/miles interval		x		x		x		x		x		x	
-drain off the condensation		x		x		x		x		x		x		x
Front suspension, steering system - check for wear according to: Wheel angles check			x		x		x		x		x		x	
Rear wheel suspension - check for wear according to: Wheel angles check			x		x		x		x		x		x	
AWD: Final drive, bevel gear -check for leaks	Only check the oil level if there is leakage		x		x		x		x		x		x	
AWD: Propeller shaft, pilot bearing, universal joint -check for signs of wear			x		x		x		x		x		x	
Lower the vehicle														
Program point:	year:	1	2	3	4	5	6	7	8	9	10	11	12	13
	km x 1000:	30	60	90	120	150	180	210	240	270	300	330	360	390
	miles x 1000:	18	36	54	72	90	108	126	144	162	180	198	216	234
Air cleaner (ACL), engine -replace	Clean the air filter housing as well. Only replaced according to km/miles		x		x		x		x		x		x	

	interval													
Fluid levels - engine compartment -check and adjust the brake fluid, clutch fluid, power steering fluid, washer fluid, coolant		x	x	x	x	x	x	x	x	x	x	x	x	x
Engine coolant - check and adjust the antifreeze/corrosion protection rating.		x	x	x	x	x	x	x	x	x	x	x	x	x
Battery -check the pole pieces, electrolyte level, mounting			x		x		x		x		x		x	
Vehicles with temporary tire sealing kit - check the sealant container - replace very four years (see decal)														
Program point:	year:	1	2	3	4	5	6	7	8	9	10	11	12	13
	km x 1000:	30	60	90	120	150	180	210	240	270	300	330	360	390
	miles x 1000:	18	36	54	72	90	108	126	144	162	180	198	216	234
Outer auxiliary belt and belt tensioner -replace according to the service program or: - replace at max. 10 year intervals					x		x			x			x	
Inner auxiliary belt -replace according to the service program or: - replace at max. 10 year intervals							x						x	
Timing belt, belt tensioner, idler pulley -replace according to the service program or: - replace at max. 10 year intervals							x						x	
Air cleaner (ACL) passenger compartment -replace		x	x	x	x	x	x	x	x	x	x	x	x	x
Vehicle with camera for collision warning - clean the inside of the windscreen in front of the camera lens		x	x	x	x	x	x	x	x	x	x	x	x	x
Vehicles with	Calibration													

<p>alcolock - calibrate</p>	<p>must be performed once a year, when the information text in the display indicates this.</p>													
<p>Brake fluid -replace</p>	<p>Recommend that a customer with normal mileage has the fluid replaced every other year.</p>		x		x		x		x		x		x	
	<p>The oil must be changed every year if the car is used for mountain driving or is mainly used in humid climates.</p>	x	x	x	x	x	x	x	x	x	x	x	x	x
<p>SRI - set the service reminder indicator (SRI) to zero</p>	<p>Resetting the service reminder indicator (SRI)</p>	x	x	x	x	x	x	x	x	x	x	x	x	x

7/9/2012

PRINT